

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

Order	Model	Order	Model
R34401	RENO-CIRSUS-24-DV-MW-MCCT-WH	R34404	RENO-CIRSUS-36-DV-MW-MCCT-BK
R34402	RENO-CIRSUS-24-DV-MW-MCCT-BK	R34405	RENO-CIRSUS-48-DV-MW-MCCT-WH
R34403	RENO-CIRSUS-36-DV-MW-MCCT-WH	R34406	RENO-CIRSUS-48-DV-MW-MCCT-BK

Read Instruction manual carefully to ensure proper installation.
Please keep this instruction manual for future using!

 **WARNING**

To avoid the risk of fire, or electric shock this product should be installed, inspected, and maintained by a qualified electrician only. Installation should be completely by an individual familiar with the construction and operation of the luminaire. Installation of luminaire must be in accordance with nation and local building and electrical codes.

Safety Warning:

To avoid electric shock:
Be certain electrical power is OFF before and during installation and maintenance.
Luminaire must be supplied by a wiring system with an equipment grounding conductor.
To avoid burning hands:
Make sure lens and housing are cool when performing maintenance.
To avoid product degradation:
Make sure the wire supply voltage is the same as the luminaire supply.
Use proper supply wiring as specified on the luminaire nameplate.
Avoid use in environments containing sulfur, chlorine, or other halides, methyl acetate or ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde or butadiene.

Notes:

Instructions do not cover all details and all possible product configurations. Do not restrict luminaire ventilation.
Ensure LED luminaire is not covered with material that will prevent convection or conduction cooling.
Ensure LED luminaire has the correct polarity before installation
Avoid exposing wiring to metal edges and sharp objects.

Maintenance:


Perform visual, electrical, and mechanical inspections on a regular basis. The environment and frequency of use should determine the inspection schedule; however, it is recommended that checks be made at least once a year.

Electrically: check to ensure that all connections are tight.


Mechanically: check that all parts are properly assembled.

INSTALLATION


■ Installation Dimension (suspended)

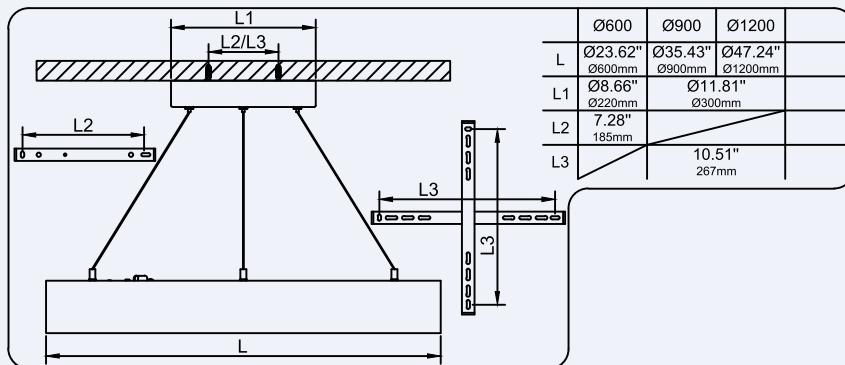


■ Dip switch for CCT & Wattage Selectable Switch Direct-indirect light ratio switch

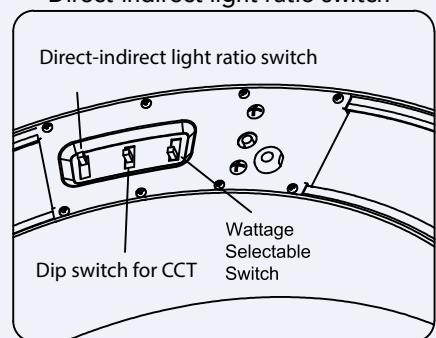

■ Wiring Diagram

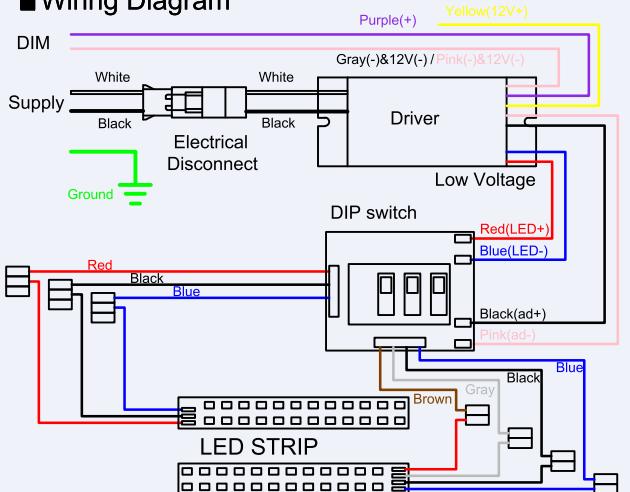

■ SUSPENDED MOUNT

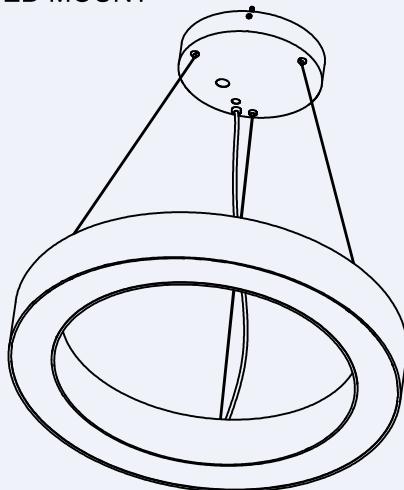

905-604-4666








info@renolighting.com



www.renolighting.com


SUSPENDED MOUNT

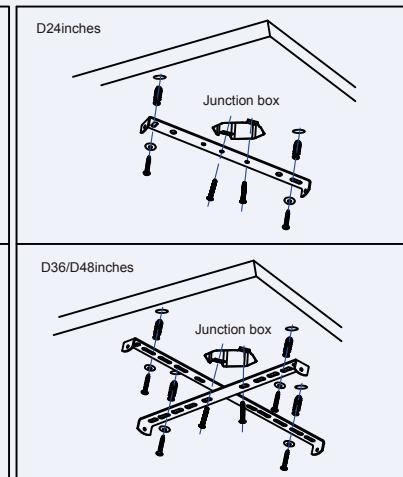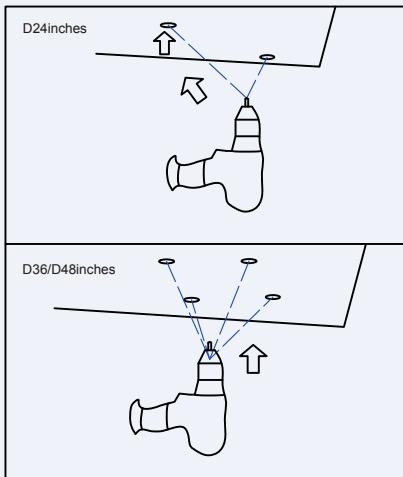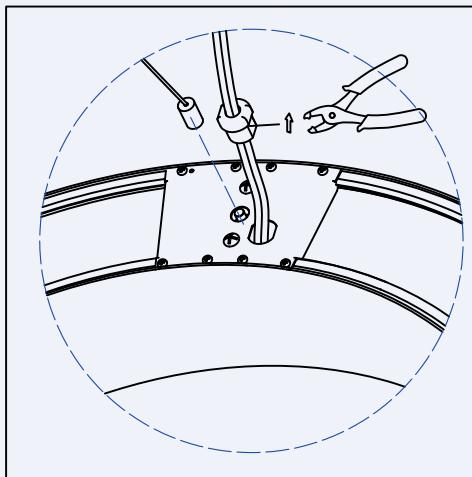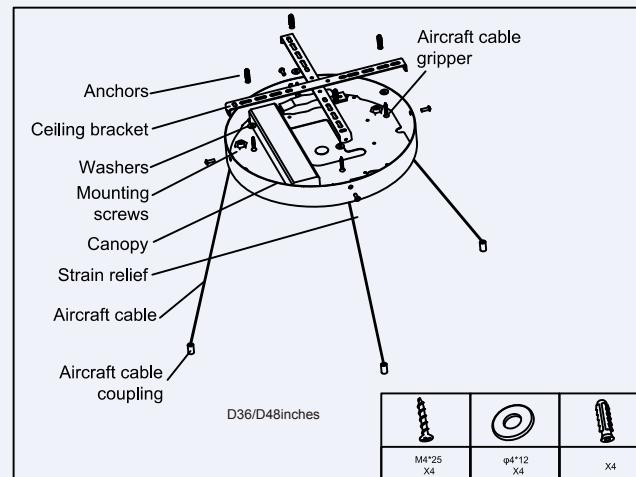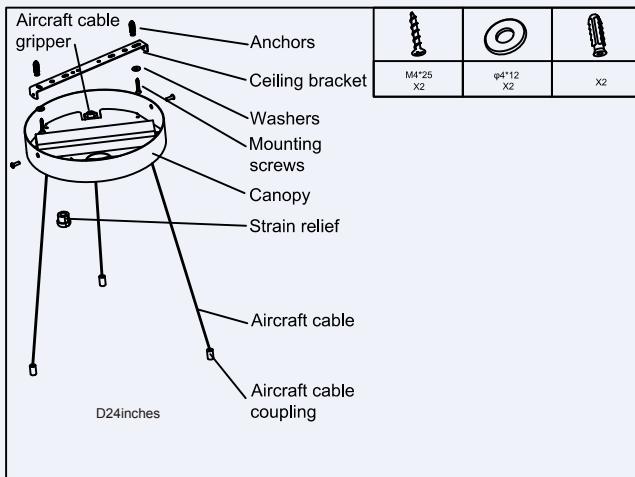

A) Secure the cable with a strain relief after confirming the proper cable length, then fasten the aircraft cable coupling onto the screws of the fixture.

B) Drill holes in the ceiling for mounting the ceiling bracket. Ceiling bracket for D24inch requires 2 holes, ceiling bracket for D36/48inch requires 4 holes(Refer to L2 and L3 for the distance between the holes).

C) As shown in the picture, use screws to fix the ceiling bracket to the junction box and the ceiling as required.

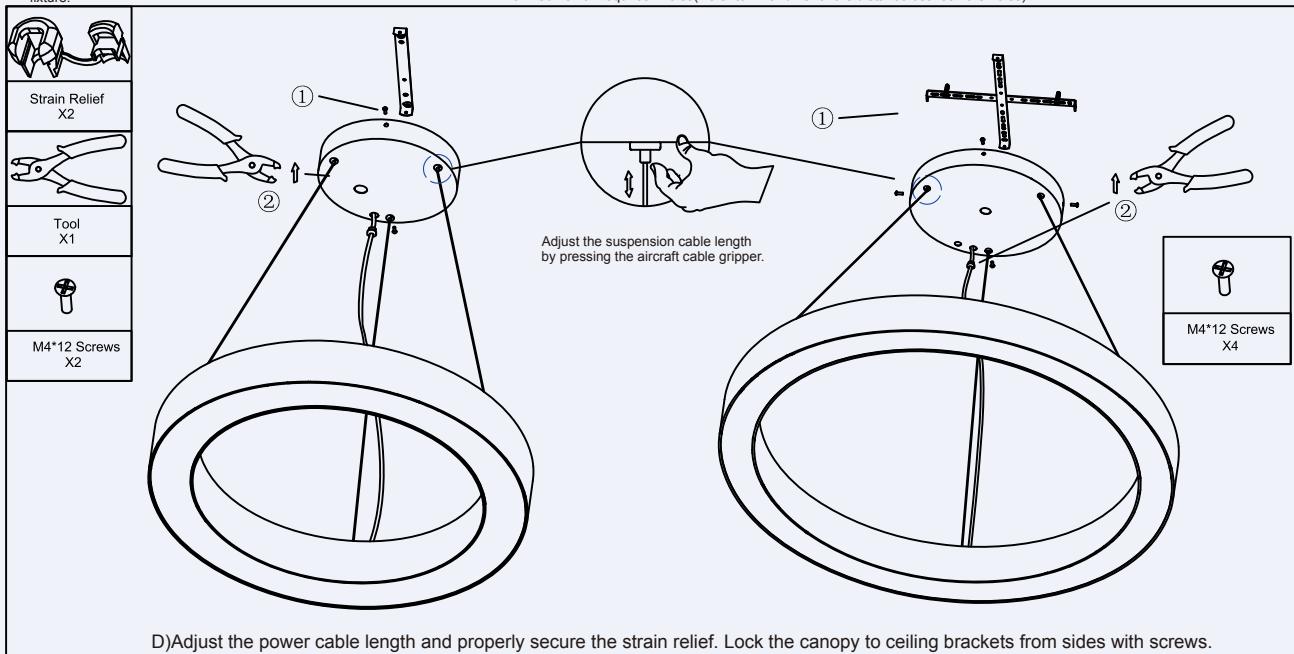

905-604-4666




info@renolighting.com



www.renolighting.com


OPTION

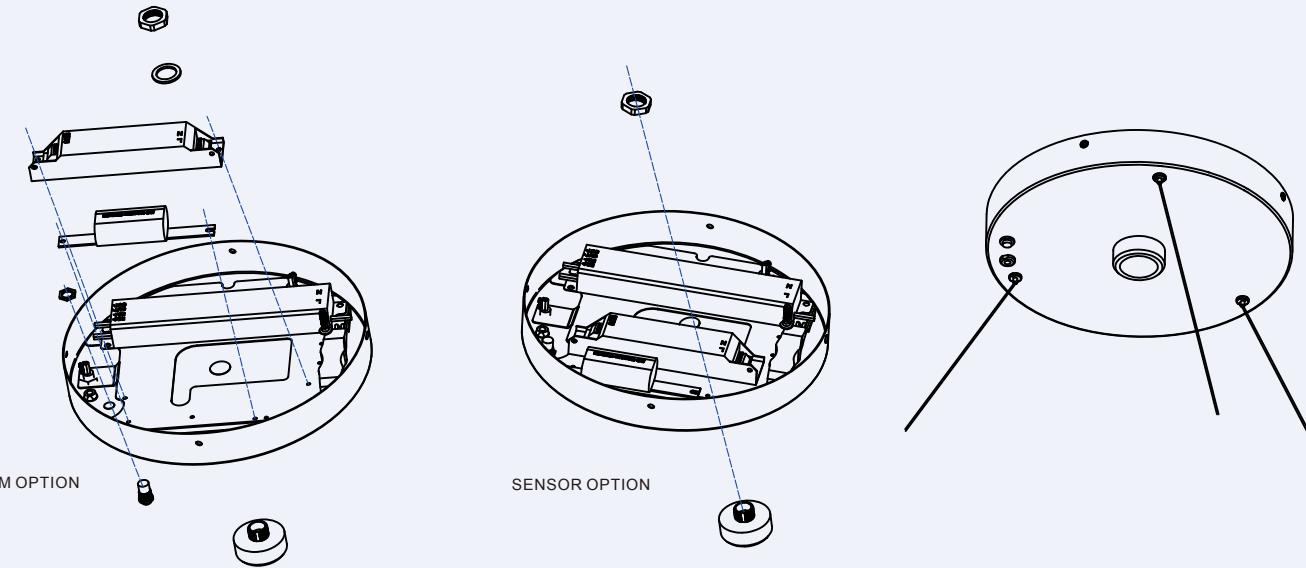

Emergency kit option and sensor installation: Please connect according to the wiring method shown.

The installation complete

Wiring Diagram for EM and Sensor option

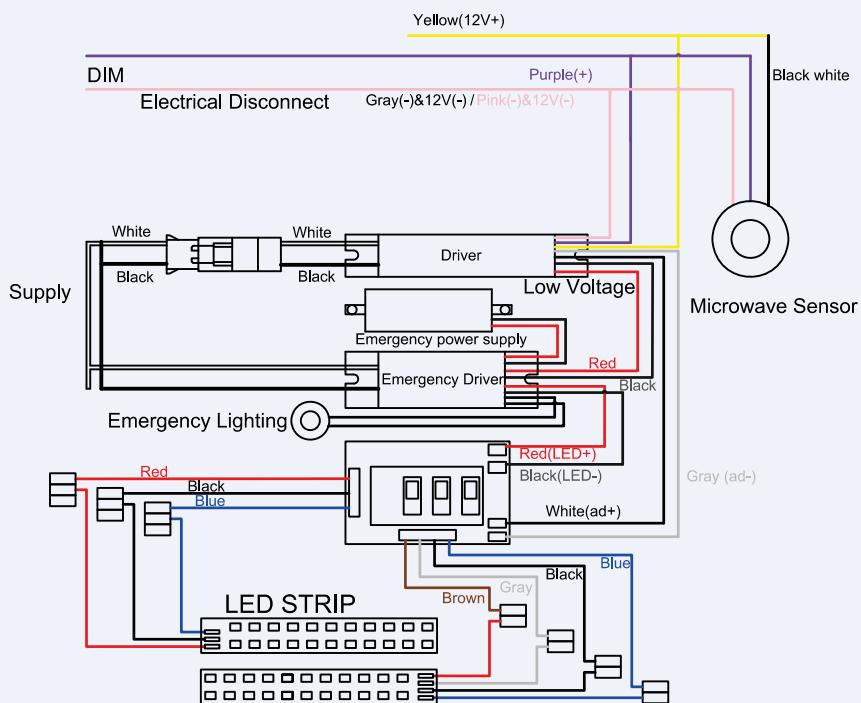

905-604-4666



info@renolighting.com



www.renolighting.com