



INSTRUCTIONS FOR THE FOLLOWING FIXTURES:

ORDER#	MODEL#
R39122	RENO-BLPL-EMB-22/24
R39123	RENO-BLPL-EMB-14


- 1.) Lock the emergency module to the bracket with M4*6 screw and nut.

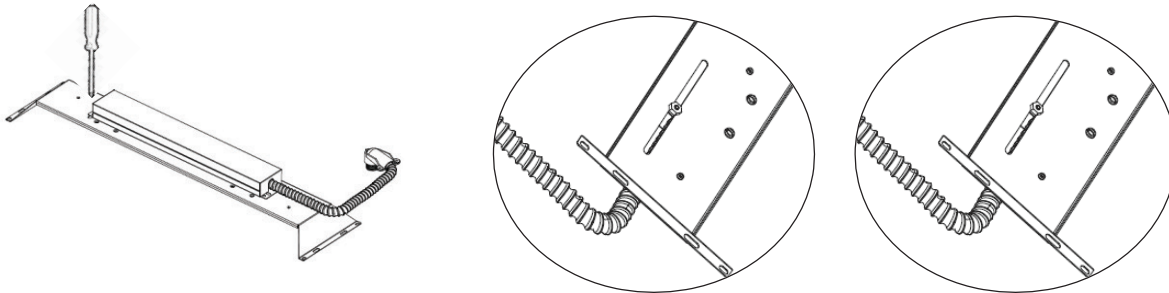

- 2.) Remove the screws on the fixture according to the Picture 1/2/3.

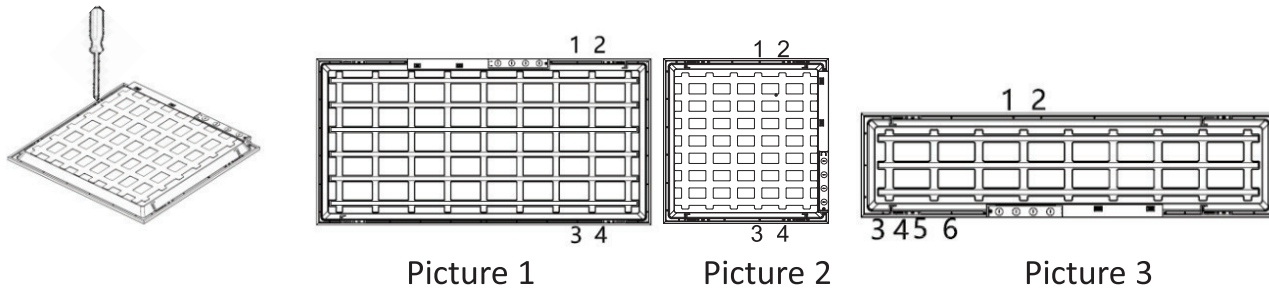

- 3.) Lock the bracket to the light fixture with ST2.9*6 in bag.

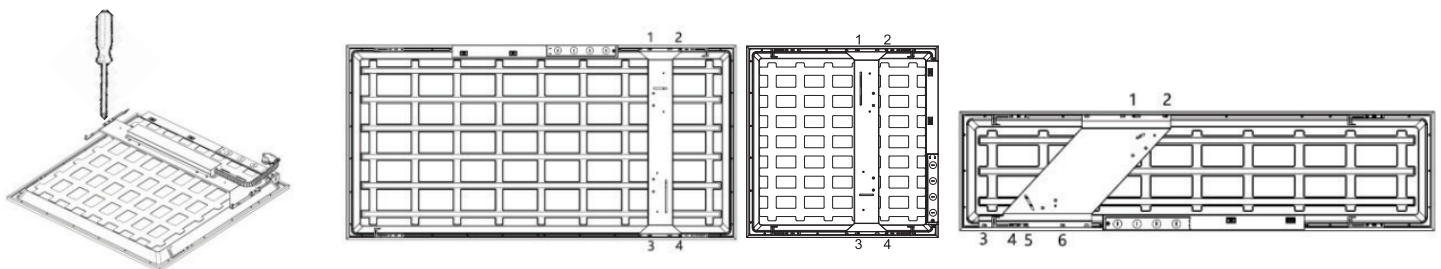

- 4.) Connect the wires according to the EM wiring requirements, and lock the access plate on driver box.

