


INSTRUCTIONS FOR THE FOLLOWING FIXTURES

ORDER#	MODEL#
R39107	RENO-MC-123

ROUGH-IN PLATE DIMENSIONS PLATE

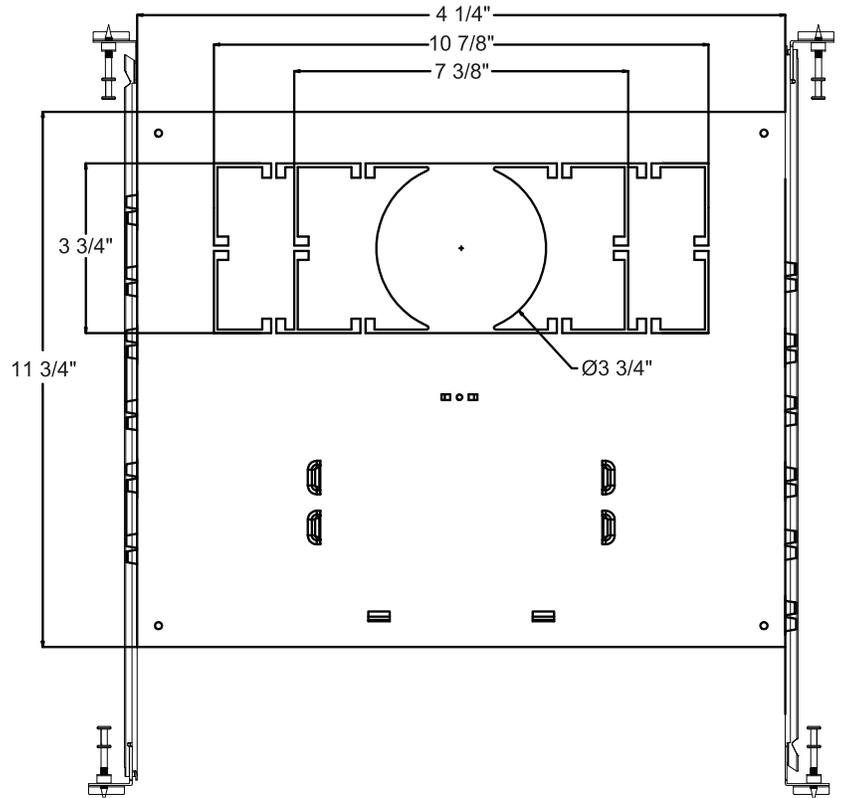

ROUGH-IN PLATE WITHOUT HANGER BARS INSTALLATION

1. Align the rough-in plate with ceiling joists in the desired fixture location. Be sure to allow enough space for the J-Box mounted on the plate (if applicable). Screw the plate to the joists using appropriate hardware (not included) to secure it in place.

ROUGH-IN PLATE WITH HANGER BARS: DRYWALL INSTALLATION

1. Use hanger bars to attach luminaire between ceiling joists. Extend the bar hangers to fit between the joists. Line up the joist location tab with bottom of the wood joist. Each end of the hanger bar is equipped with pre-installed nails.
2. Adjust and center the downlight opening hole as desired by sliding the frame along the hanger bars. Lock and secure the frame with the hanger bars by tightening the edging screws.
3. For steel studs, use self-taping sheet metal screws in place of nails. Using a hammer, secure the hanger bars to the wood joist with the nail. Secure at all four locations.

ROUGH-IN PLATE WITH HANGER BARS T-BAR INSTALLATION

1. Extend the hanger bars and secure to the ceiling T-grid using the vertical slots at the end of each hanger bar.
2. Adjust and center the downlight opening hole as desired by sliding the frame along the hanger bars. Lock and secure the frame with the hanger bars by tightening the edging screws.
3. If required by code, connect the hanger bars to the T-grid with self-taping sheet metal screws.