

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

ORDER#	MODEL#
R36230	RENO-DL4-MW-DV-MCCT-SQ-WH
R36231	RENO-DL4-MW-DV-MCCT-SQ-BK
R36232	RENO-DL6-MW-DV-MCCT-SQ-WH
R36233	RENO-DL6-MW-DV-MCCT-SQ-BK
R36234	RENO-DL8-MW-DV-MCCT-SQ-WH
R36235	RENO-DL8-MW-DV-MCCT-SQ-BK


INSTALLATION

SAFETY INSTRUCTIONS

IMPORTANT: Read all instructions before installing fixtures. Retain for future reference.

1. For your safety, this fixture must be wired in accordance to local electrical codes and ordinances. All work should be done by a qualified electrician.
2. Make certain power is OFF from the electrical panel before starting installation or attempting any maintenance.
3. No user serviceable parts inside. To avoid electrical shock do not disassemble product.
4. Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation
5. To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
6. Suitable for Damp locations.


FIG.1



	Hole Cut Size
4inch	4 1/2" * 4 1/2" (115*115mm)
6inch	6 1/8" * 6 1/8" (155*155mm)
8inch	8 1/16" * 8 1/16" (205*205mm)
10inch	9 1/16" * 9 1/16" (230*230mm)


Cut hole in ceiling according to cutout template for each model

FIG.2

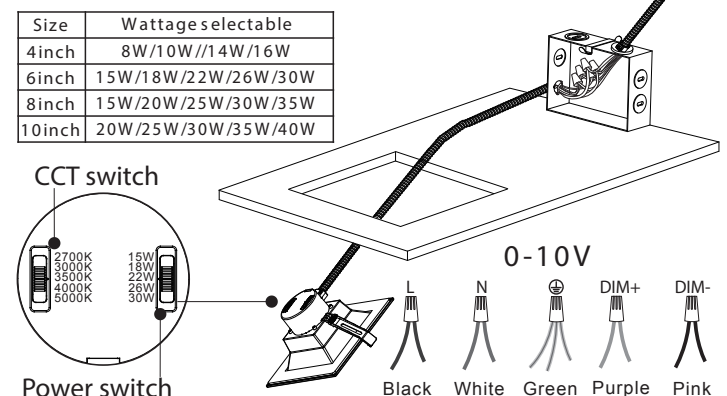


Connect AC and Dimming wires correspondingly as shown in picture Junction box not included.

FIG.3

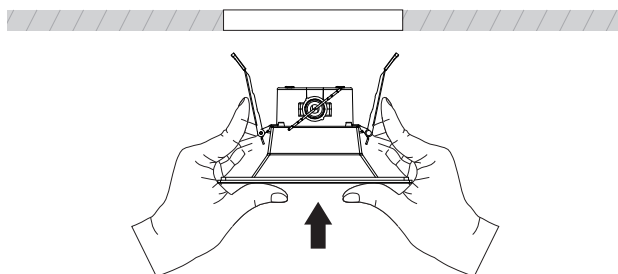

Bend back the spring clips then push the light fixture into the hole.

FIG.4

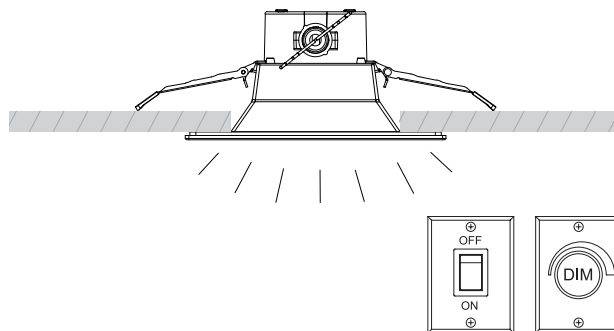

Release the spring clips. Installation completed. Switch on.