

INSTRUCTIONS FOR THE FOLLOWING FIXTURES

ORDER#

MODEL#

R51087

RENO-RB12-MW-MCCT-BRN

SAFETY INSTRUCTIONS



WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is forbidden as it may cause personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 45°C (-40°F to 113°F).
- MIN 75°C SUPPLY CONDUCTORS.
- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

INSTALLATION INSTRUCTIONS (USE THE MOUNTING BRACKET)

1. Use an Allen wrench to remove these two set screws(M5) and take off the mounting bracket. (Fig.1)

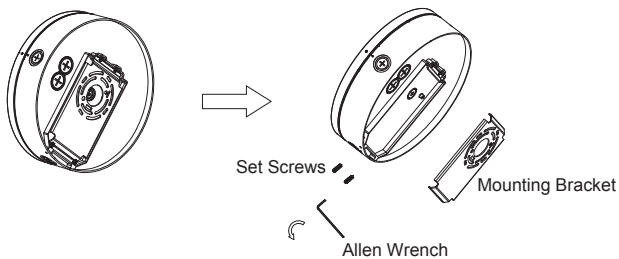


Fig.1

2. Use a Phillips screwdriver tool with a torque of 1 Nm to secure the mounting bracket with two screws(M4), which fit to the mounting bracket and junction box. (Fig.2)

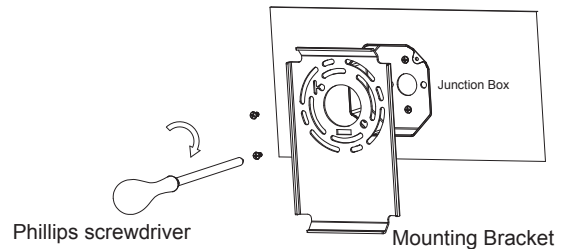


Fig.2

3. One end of the safety rope is fixed to the mounting bracket. (Fig. 3) 4. Connect the light input wire. (Fig 4)

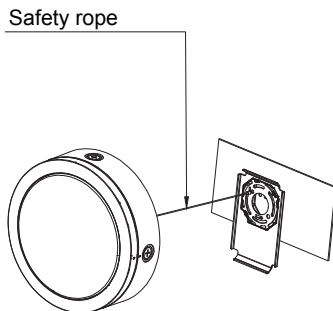


Fig.3

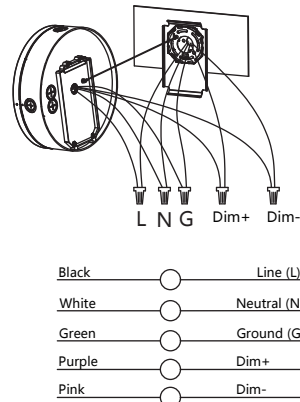


Fig.4

5. Fix the lighting fixture to the mounting bracket. (Fig. 5)

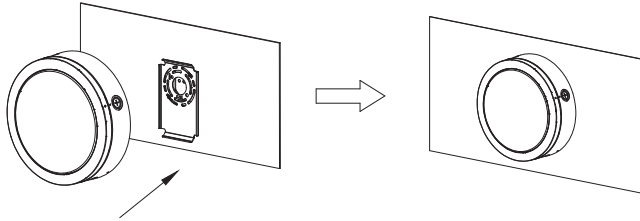


Fig.5

6. Use the Allen wrench with a torque of 6Nm to lock two M5 set screws. (Fig 6)

Caulk to mounting surface at all sides

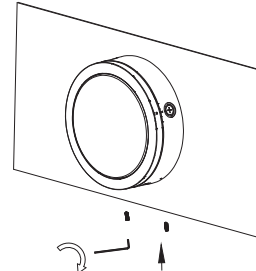


Fig.6

TOP COVER OPTIONS

(Fig.7)

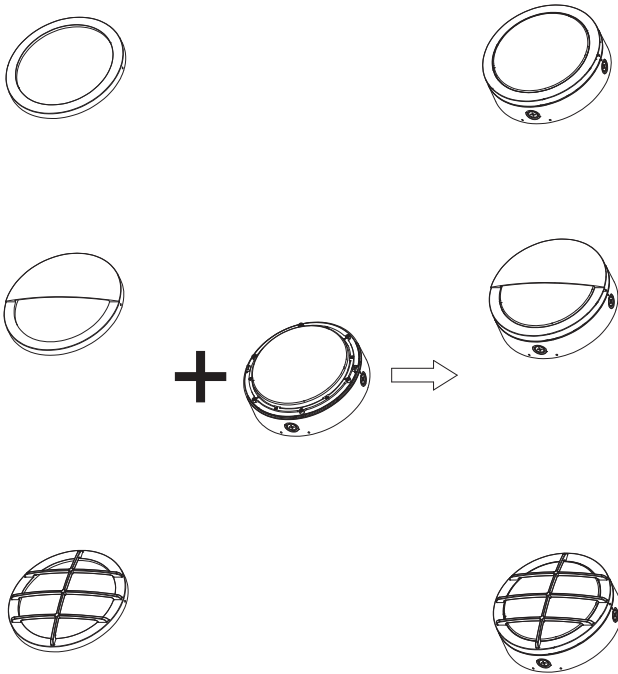


Fig.7

METHOD OF INSTALLING THE TOP COVER

Align the round hole and the triangular hole downward. (Fig.8)

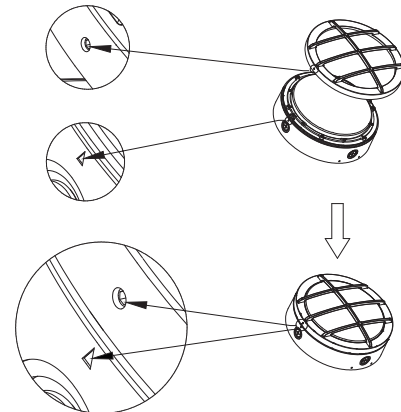


Fig.8

Align the round hole and the triangular hole .

Tighten the two set screws (M5) on the left and right; assembly complete. (Fig.9)

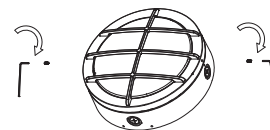


Fig.9

INSTALLATION (Conduit Installation Method)

1. Remove the two set screws(M5) on the left and right, then take off the top cover. (Fig.10)
2. Use a Phillips screwdriver to remove these 6 screws (M4). (Fig.11)

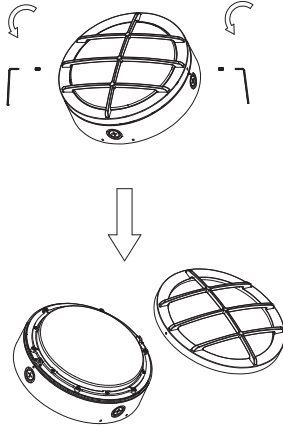


Fig.10


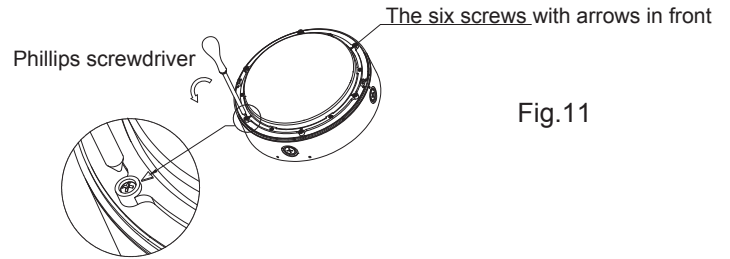


Fig.11

Note: All six of these screws have arrow indicators on the front.

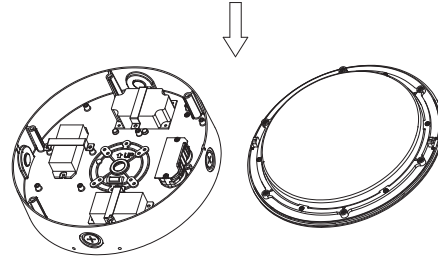

3. Use an electric drill to make installation holes. (Fig.12)


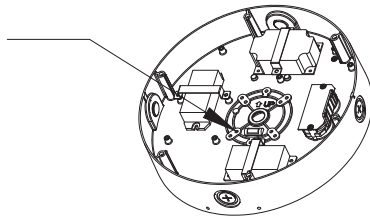


Fig.12

4. Use a Phillips screwdriver tool with a torque of 1 Nm to secure the mounting bracket with four screws(M4x30mm), which fit to the mounting bracket and junction box. (Fig.13)

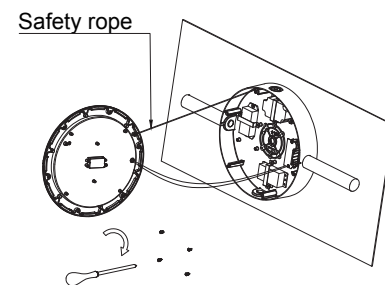

Phillips screwdriver

Fig.13

INSTALLATION (Conduit Installation Method)

6. Connect the light input wire. (Fig.14)

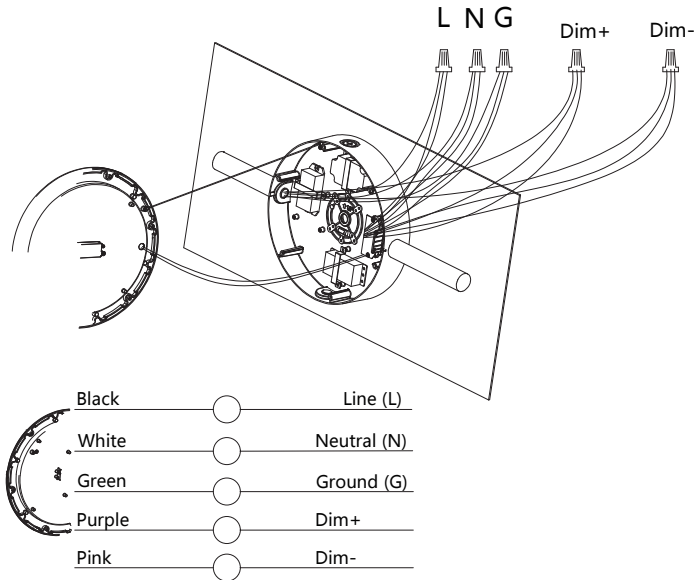


Fig.14

7. Align the triangle on the body with the Bottom Cover. (Fig.15)

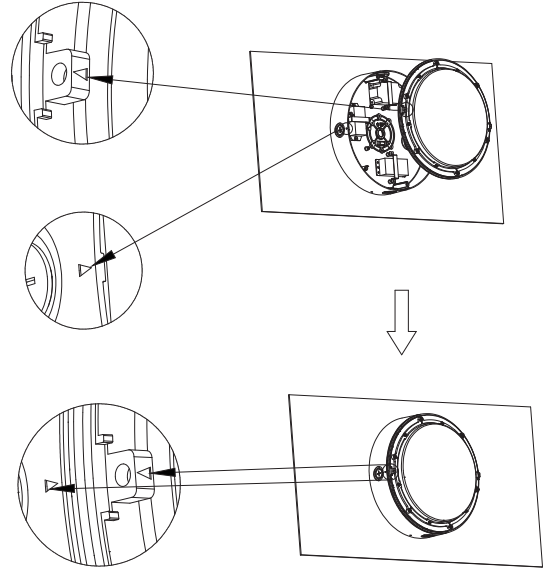


Fig.15

8. Tighten these six screws with a Phillips screwdriver (M4). (Fig.16)


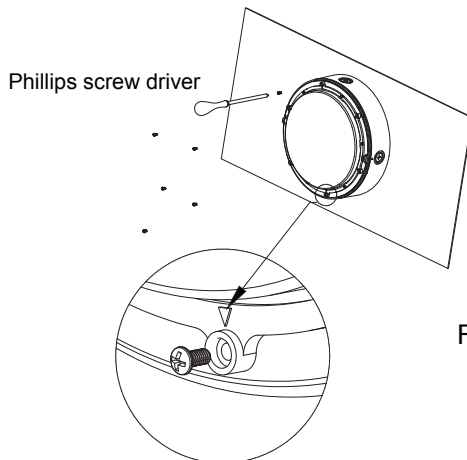


Fig.16

CCT & Power Guidance

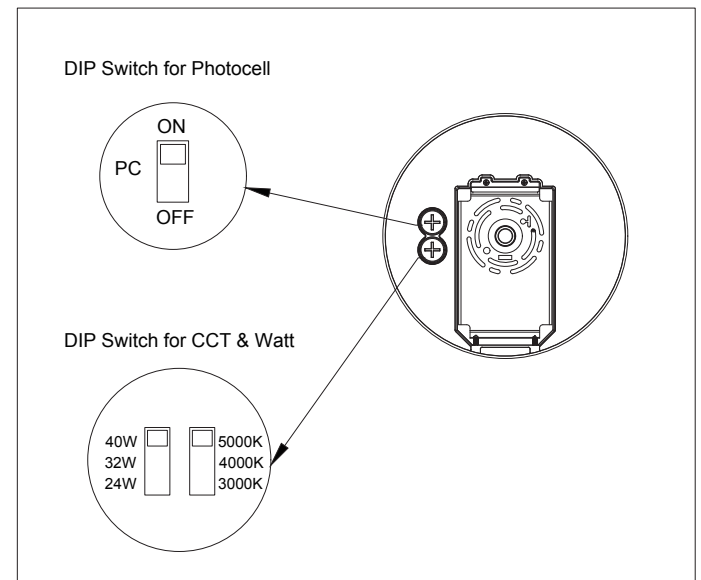

Then choose the top cover for installation; the installation method is the same as shown in Fig.7 to Fig.9 .