



Warnings: Disconnect power before installation.

1

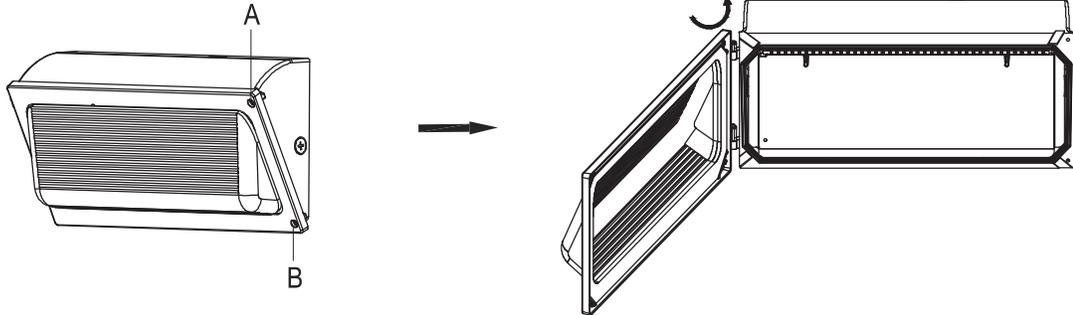


Loosen the 2x M5 crews (A/B) and open the fixture.

2

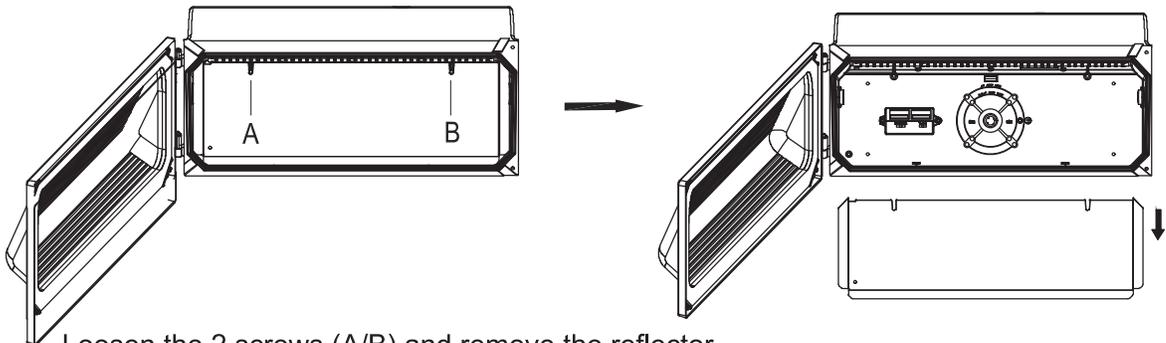


Loosen the 2 screws (A/B) and remove the reflector.

3

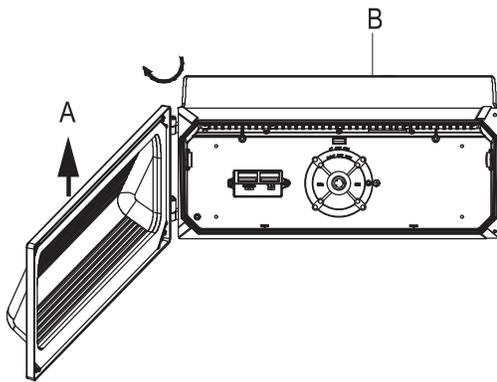


Separate part A and B and set part A aside.

4

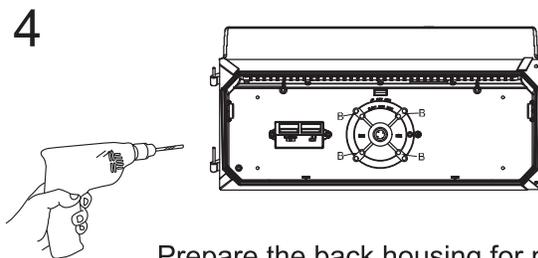


Prepare the back housing for mounting by drilling or knocking out the appropriate hole.

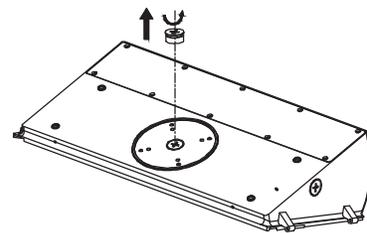


Unscrew the 1/2 screw if needed.

5

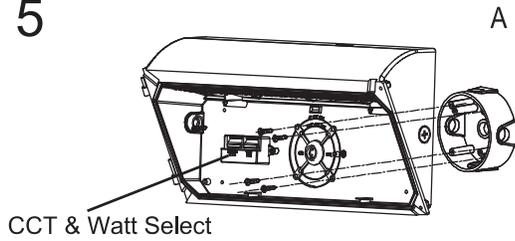


- 5.1 Fix the back housing to the junction box
- 5.2 Connect wires as per the wiring diagram (P3)
- 5.3 Select desired color temperature and wattage

B

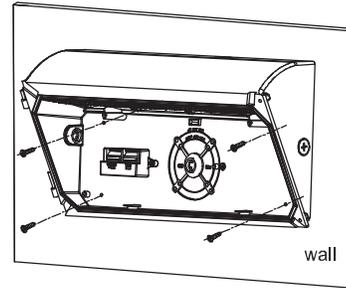


- 5.1 Fix the back housing on the wall
- 5.2 Connect wires as per the wiring diagram (P3)
- 5.3 Select desired color temperature and wattage

6

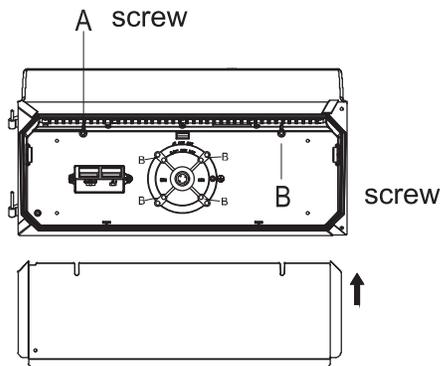


Put back the reflector and tighten the 2 screws

7

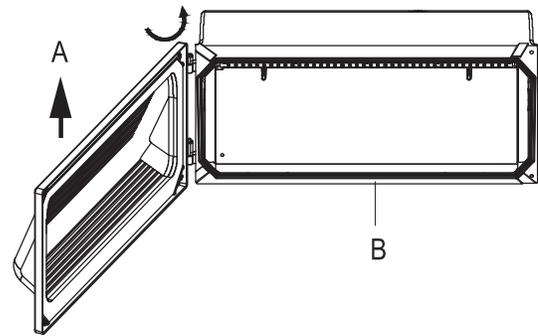

Put part A back onto the hinge of part B.
Check the hinge for secure.

8

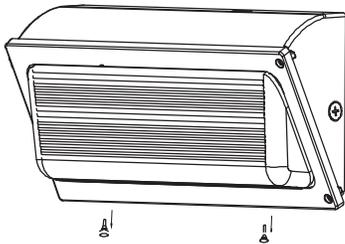

Remove the waterproof plugs.

Connect to the main electricity and check if the unit works properly.

