





INSTRUCTIONS FOR THE FOLLOWING FIXTURES:

Order	Model
R31919	RENO-TKH-CAB-WH


INSTALLATION

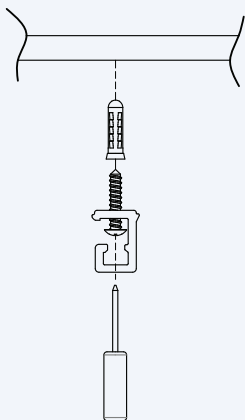


1. Fix the fixing block on the ceiling with screws.

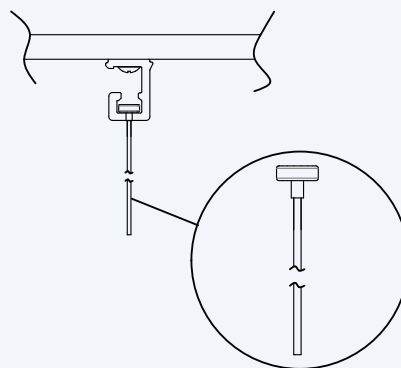


2. Pass the cable through the fixed block.

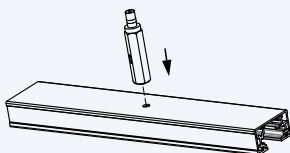


3-1. Place the locker in the round hole of the track.

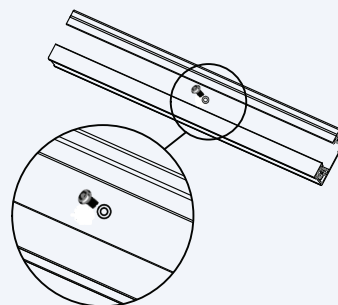

3-2. Fix the locker with C-shaped buckler or nut.

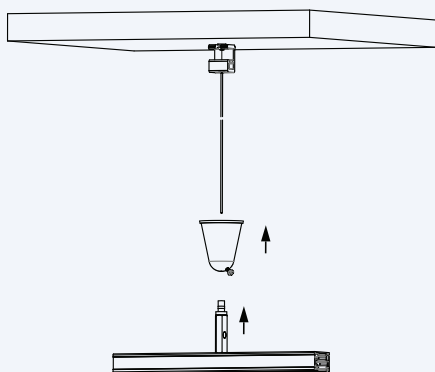

4-1. Insert the cable into the locker.

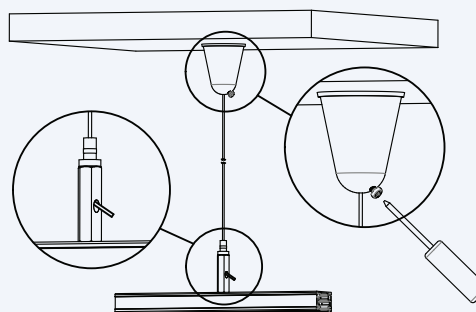

4-2. Fix the ceiling cup with screws.